

# USB DIGITAL WEB CAMERA OPERATION MANUAL

---

## Introduction

### System Requirements


- Display card: VGA
- Memory: 64MB
- CPY: Pentium 333 and above
- System: Windows 98/ME/XP

### Specification


- Image sensor: CMOS sensor 350K / 1300K
- Interface: USB
- Frame rate: 30fps
- Focus: 30mm to infinity adjustable
- Auto white balance
- Auto electronic exposure
- Auto gain comperature

## Driver Installation Guide

Insert the installation CD to your CD drive and run setup.exe. The following window will show up:

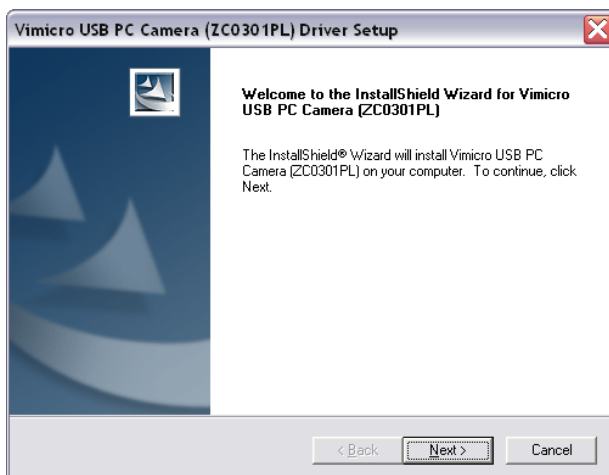


Select "Next" and the driver will install automatically and the following window would show the completion of the installation.

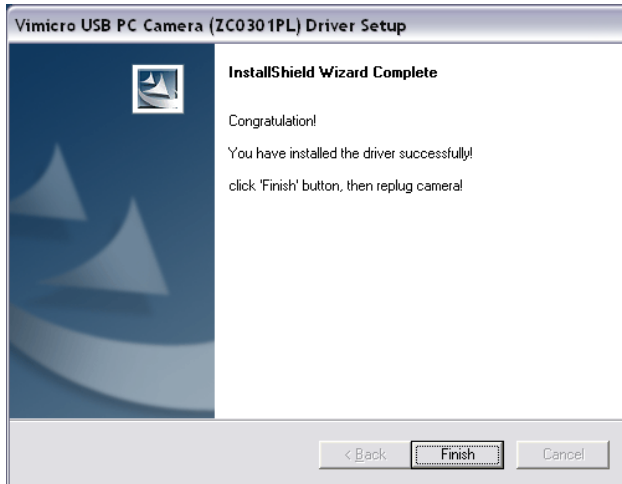



## User Guide

To run the application, connect the camera to your computer via a USB port. Click “Start” on your Windows taskbar, select “All Programs”, “Vimicro USB PC Camera” and then “AMCAP.”

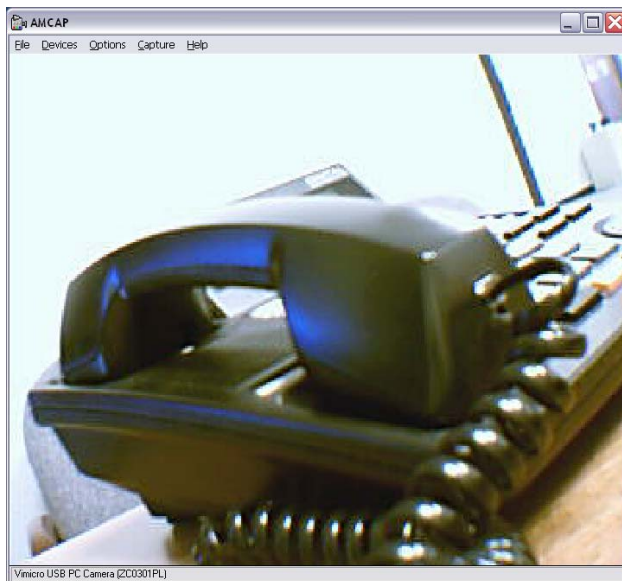

The picture will show up in the window. Adjust the picture by moving the camera.

 Use the menu bar to set up, capture, and save the picture. The following shows various options:

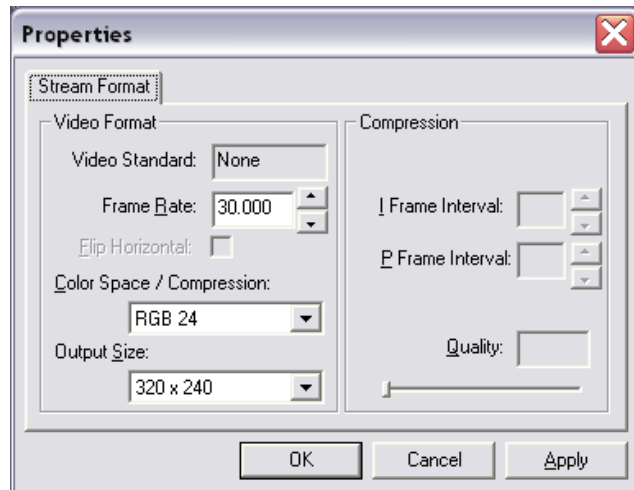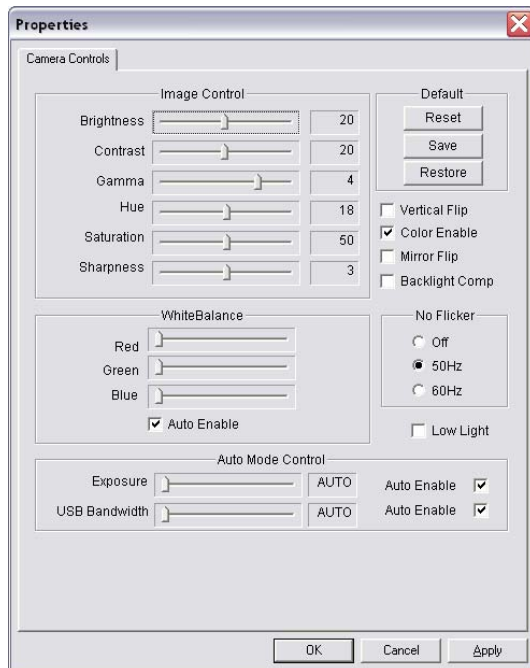

## Frequently Asked Questions

1. Black screen
  - a. Check if there is anything on the lens of the camera. If so, remove it with a cotton swab stick.
  - b. Choose "preview" under "OPTION".
2. The picture fuzzy
  - a. Turn left and right sides to adjust the camera.
  - b. Rotate the lens until you can see the clear image.
  - c. Use tampon, cloth or soft fabric to clean the lens.
3. The picture glimmers
  - a. Set up and shake to the suitable position.
4. The vision is disconnected
  - a. Reduce USB equipment.
  - b. Reset your system.
  - c. Upgrade components of the computer.
5. Can't find the camera in your PC
  - a. Re-connect the camera to your PC.
  - b. Re-set up the system.
  - c. Check if the audio frequency line is correctly installed.
  - d. Adjust the audio volume.
  - e. Check whether there is MICROPHONE function for this type.